

Ceilings

TECHNICAL MEMO

To: CertainTeed Ceilings Customers	Organization:
RE: Maintenance Instructions	Date: 9/18/2008
From: CTC Technical Services	Phone: 800-233-8990

Maintenance Instructions for Ecophon Painted Products

Clean cotton gloves should be worn at all times, both during ceiling assembly and throughout all work in the suspended ceiling that may follow the actual installation. When the panels are removed they must be taken completely out of the grid and stored on a flat surface. The panels should be laid face to face to prevent soiling and damage during any work session that requires access.

Ecophon painted acoustic panels can withstand manual wet cleaning with warm water. Use a clean, soft sponge and plenty of water containing a mild detergent of the same type and in a concentration recommended for painted surfaces. Rinse off immediately with clean water. Ensure the whole surface is treated evenly by using a circular motion with moderate pressure. Avoid prolonged rubbing of small areas. Wipe with a slightly damp, clean cloth or sponge so that dirt dissolved in the rinsing water does not dry and leave stains. The temperature of water used for cleaning and rinsing should not exceed 95°F.

Note:

- After washing the panel will appear slightly darker in color until fully dried out
- Wet cleaning can be carried out on a weekly basis

If any portion of this information provokes a question please don't hesitate to contact CertainTeed Ceilings Technical Services.